


Caution

⚠ When trip lever 15 is at 'RESET' position, don't use other ways to turn engine!

⚠ Before winding handle 14 is removed out, tripping starter is not allowed!


⚠ Prohibit no-load energizing and releasing! (before proper installation don't energizing)

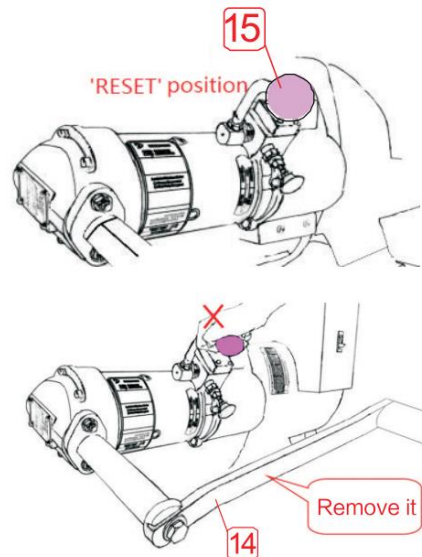


Energizing and starting

Power system and engine pretreatment: Gear box is in the neutral position Fuel supply system has no any restriction.

I . Pull reset knob 16, the trip lever 15 will immediately spring to "RESET" position;

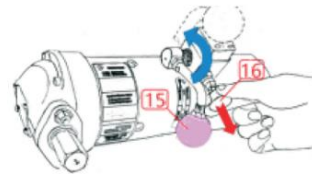


II . Put the winding handle 14 on the input adaptor 2, crank the winding handle 14 slowly until 1-2 red springs can be viewed from the view window 19;

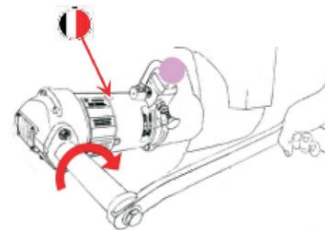

Stop winding once 1-2 red springs occurs at the view window 19. Over-torque will cause parts damage!

III . Remove the winding handle 14 and then push trip lever 15 quickly toward the 'TRIP/Standby' position to start the engine;

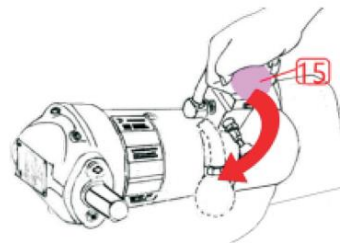

Hold the lever trip 15 at 'TRIP/Standby' position, until use the spring starter next time!

